

# Essential Jamb Extension Installation Field Replacement Instruction



- The following instruction details how to replace damaged jamb extension in the field.

 
You Will Need to Supply	
Safety glasses	1 1/8" finish nails with gun
Caulking gun	Silicone
Table saw or router	




## CAUTION

Always practice safety! Wear the appropriate eye, ear, and hand protection, especially when working with power tools.

Dark Interior Jamb Extension Profiles



W13072/V2893  
4 9/16" Jamb Extension



W13083/V2893  
6 9/16" Jamb Extension

## Replacing Damaged Jamb Extension on Installed Units

- Remove interior trim from unit.
- Dislodge the damaged jamb extension from the end joints and pull away from unit carefully.
- Trim or remove nails from existing jamb extension, and inspect unit kerf.
- Use a router or table saw to trim curved barb from new jamb extension. See figure .

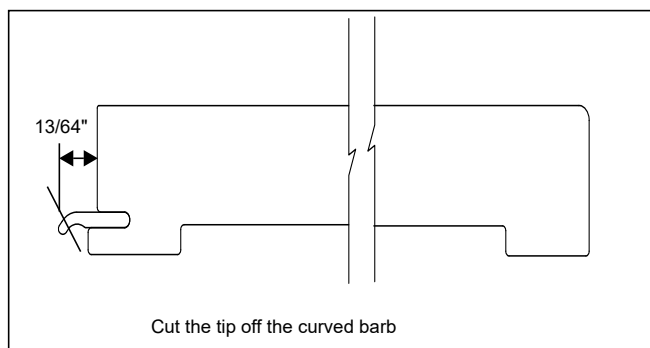


Figure 1

2019-07-29  
19972133

- Apply a bead of silicone to the backside of the barb. See figure 2.

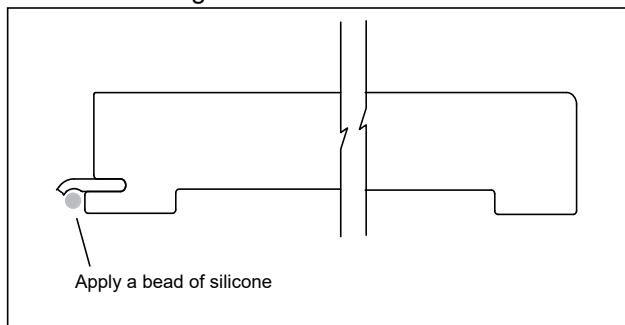


Figure 2

- Insert the barb into the kerf and toenail the new jamb extension to the existing jamb extension. Be sure to angle nails enough for the trim to cover them.

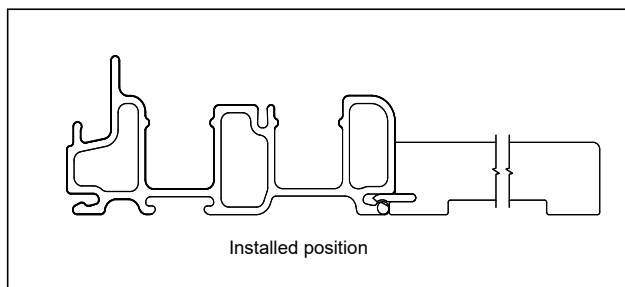


Figure 3

- Reinstall interior trim.