


1 3/4" INSWING / OUTSWING FRENCH DOOR


6-6R HEIGHT

Clad MO (mm)	1-8 11/32 (517)	2-7 1/8 (791)	3-1 1/8 (943)	4-11 1/2 (1511)	5-11 1/2 (1816)	8-9 7/8 (2689)	7-10 11/16 (2405)
Wood MO (mm)	1-10 31/32 (583)	2-9 3/4 (857)	3-3 3/4 (1010)	5-2 1/8 (1578)	6-2 1/8 (1883)	9-0 1/2 (2756)	8-1 5/16 (2472)
RO (mm)	1-8 27/32 (529)	2-7 5/8 (803)	3-1 5/8 (956)	5-0 (1524)	6-0 (1829)	8-10 3/8 (2702)	7-11 3/16 (2418)
FS (mm)	1-7 27/32 (504)	2-6 5/8 (778)	3-0 5/8 (930)	4-11 (1499)	5-11 (1803)	8-9 3/8 (2677)	7-10 3/16 (2392)
DLO (mm)	0-11 1/2 (292)	1-6 25/32 (477)	2-0 25/32(629)	1-6 25/32 (477)	2-0 25/32 (629)	2-0 25/32 (629)	0-1 1/2 (292) / 1-625/32 (477)

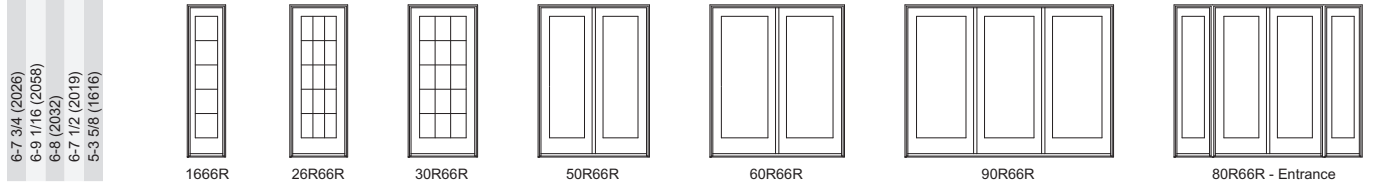

6-8 HEIGHT (7-0, 8-0 AND 9-0 HEIGHTS SEE BELOW)


Clad MO (mm)	1-8 11/32 (517)	2-1 15/16 (659)	2-7 15/16 (811)	2-9 15/16 (862)	3-1 15/16 (946)	3-7 15/16 (1116)
Wood MO (mm)	1-10 31/32 (583)	2-4 9/16 (726)	2-10 9/16 (878)	3-0 9/16 (929)	3-4 9/16 (1030)	3-10 9/16 (1183)
RO (mm)	1-8 27/32 (529)	2-2 7/16 (672)	2-8 7/16 (824)	2-10 7/16 (875)	3-2 7/16 (976)	3-8 7/16 (1129)
FS (mm)	1-7 27/32 (504)	2-1 7/16 (646)	2-7 7/16 (799)	2-9 7/16 (849)	3-1 7/16 (951)	3-7 7/16 (1103)
DLO (mm)	0-11 1/2 (292)	11-1 19/32 (345)	1-7 19/32 (498)	1-9 19/32 (548)	2-1 19/32 (650)	2-7 19/32 (802)

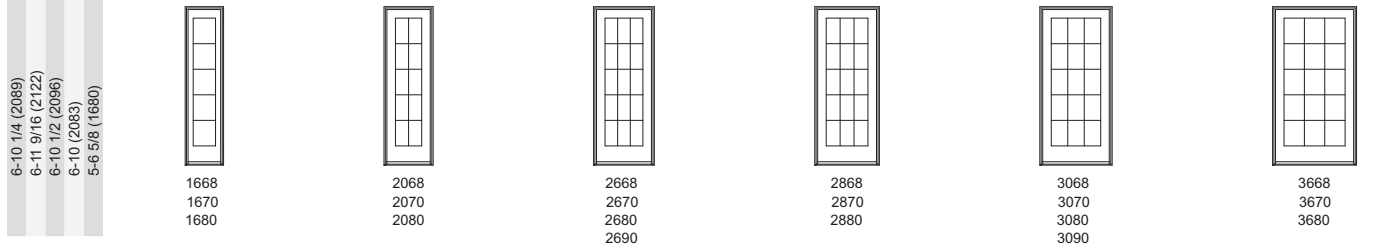

Clad MO (mm)	4-1 1/8 (1248)	4-11 1/2 (1511)	5-1 1/8 (1553)	5-5 1/8 (1654)	5-11 1/2 (1816)	6-1 1/8 (1857)	7-1 1/8 (2162)
Wood MO (mm)	4-3 3/4 (1314)	5-2 1/8 (1578)	5-3 3/4 (1619)	5-7 3/4 (1721)	6-2 1/8 (1883)	6-3 3/4 (1924)	7-3 3/4 (2229)
RO (mm)	4-1 5/8 (1260)	5-0 (1524)	5-1 5/8 (1565)	5-5 5/8 (1667)	6-0 (1829)	6-1 5/8 (1870)	7-1 5/8 (2175)
FS (mm)	4-0 5/8 (1235)	4-11 (1499)	5-0 5/8 (1540)	5-4 5/8 (1641)	5-11 (1803)	6-0 5/8 (1845)	7-0 5/8 (2149)
DLO (mm)	1-1 19/32 (345)	1-6 25/32 (477)	1-7 19/32 (498)	1-9 19/32 (548)	2-0 25/32 (629)	2-1 19/32 (650)	2-7 19/32 (802)



Clad MO (mm)	6-0 5/16 (1837)	7-6 5/16 (2294)	8-0 5/16 (2446)	9-0 5/16 (2751)	10-6 5/16 (3208)
Wood MO (mm)	6-2 15/16 (1903)	7-8 15/16 (2361)	8-2 15/16 (2513)	9-2 15/16 (2818)	10-8 15/16 (3275)
RO (mm)	6-0 13/16 (1849)	7-6 13/16 (2307)	8-0 13/16 (2459)	9-0 13/16 (2764)	10-6 13/16 (3221)
FS (mm)	5-11 13/16 (1824)	7-5 13/16 (2281)	7-11 13/16 (2434)	8-11 13/16 (2738)	10-5 13/16 (3196)
DLO (mm)	1-1 19/32 (345)	1-7 19/32 (498)	1-9 19/32 (582)	2-1 19/32 (650)	2-7 19/32 (802)

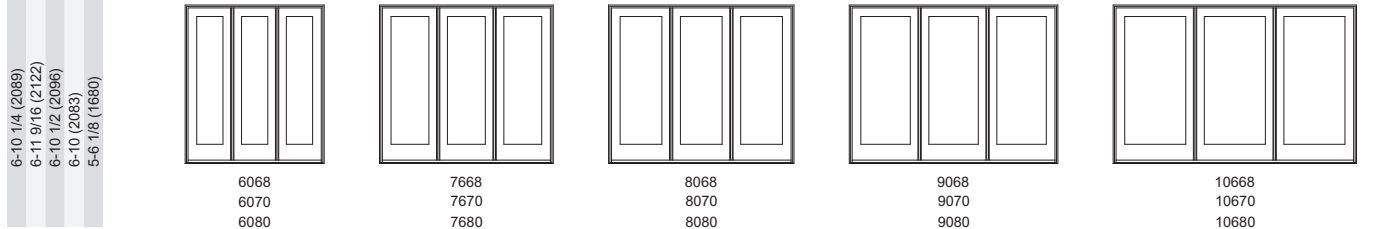

7-0, 8-0 AND 9-0 HEIGHTS:

	7-0 Height	8-0 Height	9-0 Height
Clad MO (mm)	7-2 1/4 (2191)	7-11 3/4 (2432)	8-11 3/4 (2737)
Wood MO (mm)	7-3 9/16 (2224)	8-1 1/16 (2465)	N/A
RO (mm)	7-2 1/2 (2197)	8-0 (2438)	9-0 (2743)
FS (mm)	7-2 (2184)	7-11 1/2 (2426)	8-11 1/2 (2731)
DLO (mm)	5-10 1/8 (1781)	6-7 5/8 (2022)	7-7 5/8 (2327)


Ultimate Inswing French Door: UIFD
 Ultimate Outswing French Door: UOFD
 Ultimate Wood Inswing French Door: UWIFD
 Ultimate Wood Outswing French Door: UWOFD

1 3/4" INSWING / OUTSWING FRENCH DOOR


6-8 HEIGHT (7-0 AND 8-0 HEIGHTS SEE BELOW)

Clad MO (mm)	7-11 1/2 (2426)	9-11 1/2 (3035)	10-7 1/2 (3239)
Wood MO (mm)	8-2 1/8 (2492)	10-2 1/8 (3102)	10-10 1/8 (3305)
RO (mm)	8-0 (2438)	10-0 (3048)	10-8 (3251)
FS (mm)	7-11 (2413)	9-11 (3023)	10-7 (3226)
DLO (mm)	1-1 19/32 (345)	1-7 19/32 (498)	1-9 19/32 (548)


6-10 1/4 (2089)
6-11 9/16 (2122)
6-10 1/2 (2086)
6-10 (2083)
5-6 1/8 (1680)

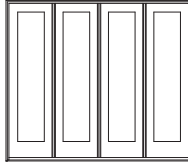

8068
8070
8080

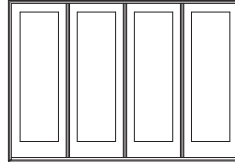


10068
10070
10080

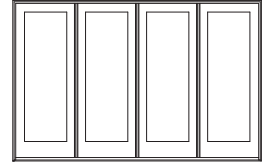


10868
10870
10880

Clad MO (mm)	11-11 1/2 (3645)	13-11 1/2 (4255)
Wood MO (mm)	12-2 1/8 (3712)	14-2 1/8 (4321)
RO (mm)	12-0 (3658)	14-0 (4267)
FS (mm)	11-11 (3632)	13-11 (4242)
DLO (mm)	2-1 19/32 (650)	2-7 19/32 (802)

6-10 1/4 (2089)
6-11 9/16 (2122)
6-10 1/2 (2086)
6-10 (2083)
6-7 7/16 (1713)

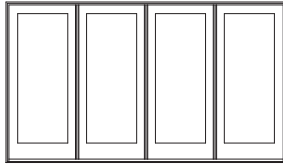


12068
12070
12080

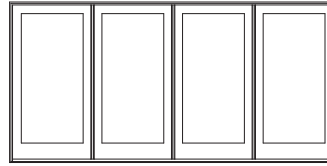


14068
14070
14080

Clad MO (mm)	4-7 9/16 (1411)	4-7 9/16 (1411)	6-1 1/8 (1857)	9-0 5/16 (2751)
Wood MO (mm)	4-10 3/16 (1478)	4-10 3/16 (1478)	6-3 3/4 (1924)	9-2 5/16 (2802)
RO (mm)	4-8 1/16 (1424)	4-8 1/16 (1424)	6-1 5/8 (1870)	9-0 13/16 (2764)
FS (mm)	4-7 1/16 (1399)	4-7 1/16 (1399)	6-0 5/8 (1845)	8-11 13/16 (2739)
DLO (mm)	2-1 19/32 (650) / 0-11 1/2 (292)	0-11 1/2 (292) / 2-1 19/32 (650)	2-1 19/32 (650) / 0-11 1/2 (292) / 2-1 19/32 (650)	0-11 1/2 (292) / 2-1 19/32 (650) / 0-11 1/2 (292)


6-10 1/4 (2089)
6-11 9/16 (2122)
6-10 1/2 (2086)
6-10 (2083)
6-7 7/16 (1713)




4668 XO - Entrance
4670 XO - Entrance
4680 XO - Entrance



4668 OX - Entrance
4670 OX - Entrance
4680 OX - Entrance

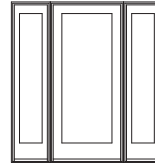

6268 - Entrance
6270 - Entrance
6280 - Entrance

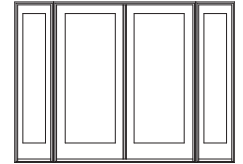

9268 - Entrance
9270 - Entrance
9280 - Entrance

Details and Elevations not to scale.

R = Retro Size

- Lite patterns shown are for standard, SDL and ADL in 6-6, 6-8, and 7-0 heights The standard pattern for 8-0 heights is a 6 high lite cut. Standard lite cut for 9-0 height is a 7 high lite cut.
- All glass is tempered.
- Elevations as viewed from the exterior.
- CN 9-0 heights are limited to 1 and 2 wide configurations using CN2-6 and 3-0 panels.

Please consult your local Marvin representative for masonry openings that include casings and subsills.

For further details and drawings visit the 'Tools and Documents' section at Marvin.com.