

MARVIN® Ultimate Wood Double Hung Magnum Round Top Supplemental Installation Instruction

NOTE: These instructions will show how to properly fasten through the “round top” portion of the head jamb on your Ultimate Wood Double Hung Magnum Round Top Window. These instructions are a supplement to the included “Window Installation for Structural Installations” and the “Ultimate Double Hung Magnum Supplemental Instructions.” Use in conjunction with those instructions for proper rough opening prep, fastening, and operation procedures.


Parts Included in Round Top Ultimate Double Hung Magnum Installation Kit

6	#10 x 3" Phillips flat head screws
6	Wood plugs



Seek Assistance

Get the assistance of one or two people when removing and reinstalling magnum sash. Sash are heavy and under a great amount of spring tension when first installed.

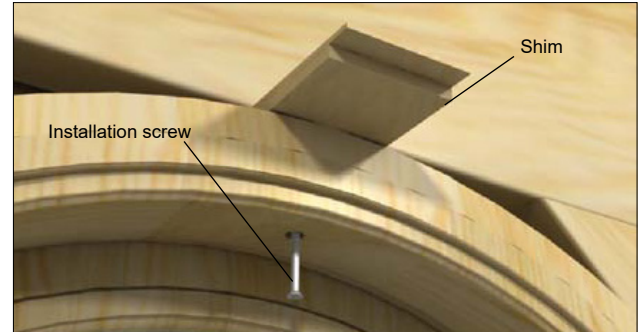

1. After the window is square, plumb, and fastened in the opening, locate the pre-drilled screw holes in the head jamb and insert shims between window frame and the rough opening framing near the screw holes. Shims should fit snugly but not bow the frame.
2. Drive a #10 installation screw into the rough opening framing. Be careful not to over tighten the screw. The screw head should seat firmly in the countersunk hole.



Tip

You may not need all the screws and plugs included in the installation kit. These screws and plugs are used only on the round top portion of the window where the pre-drilled screw holes are located

3. Push the wood plugs into the holes to cover the screw heads. The plugs should fit flush with the surface of the frame.

