

# UCA Push Out IZ3 Strike Fastening Field Applied Instruction



**ABSTRACT:** This instruction is intended to show the Ultimate Casement/Awning Push Out IZ3 location for replacing the screws through the locking strikes.

## Supplies Needed:

Screwdriver #8 X 2 1/2" screws (supplied)

1. Install window as described in the installation instruction included with unit. (Please refer to [Window Installation IZ3 Structural Installations Instruction](#).) Jamb screw or structural brackets installation methods are required. See figure 1.

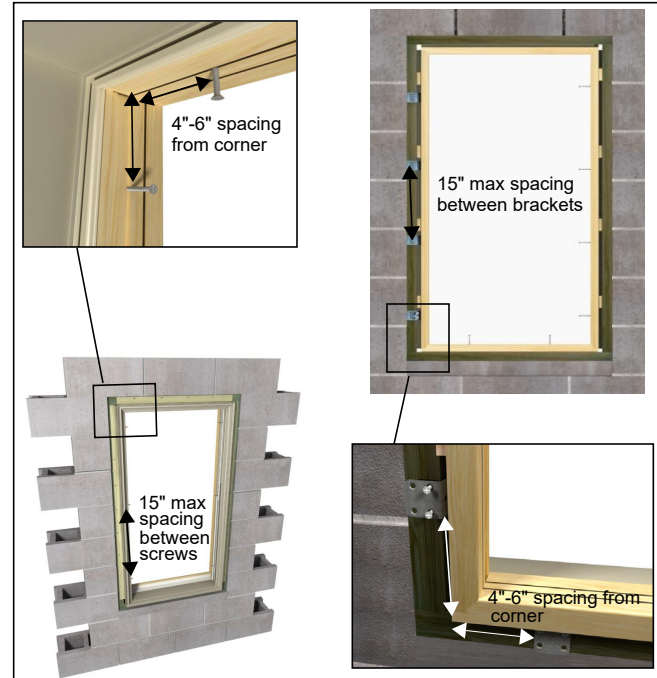


Figure 1

2. Remove existing screws from locking strikes. See figure 2.



Figure 2

3. Fasten locking strikes with #8 x 2 1/2" screws. See figure 3.

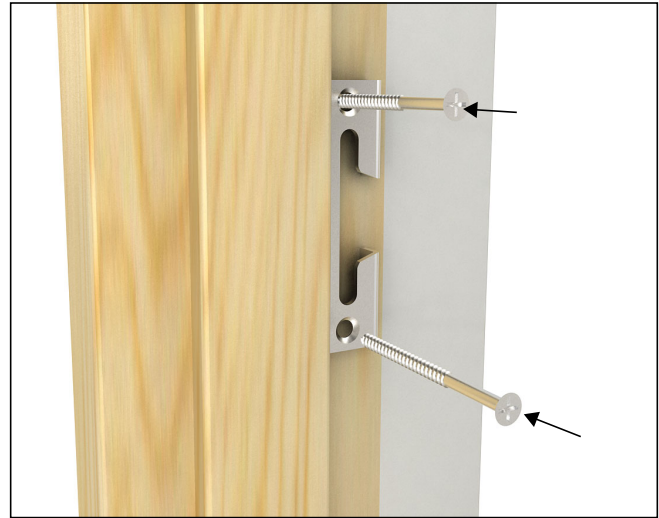


Figure 3