

# Construction Lock Installation

## Field Assembly and Installation Instructions for Doors



The following instruction shows how to properly install the optional construction lock for Marvin door products.


**NOTE:** This lock is designed to secure residential swinging and sliding Marvin door products when ordered with standard locks.

### YOU WILL NEED TO SUPPLY

Phillips screwdriver      Standard screwdriver

### Installing the Construction Lock

1. Insert the Construction Lock into the two holes on the exterior side of the stile. Ensure the guides are positioned into the holes. See figure 1.

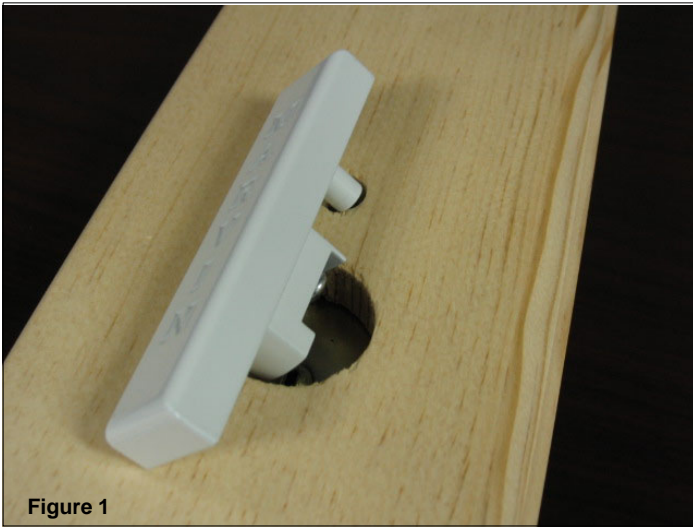

2. Using a Phillips screwdriver, insert and tighten the screw with the washer into the top hole located on the interior side of the stile. See figures 2 and 3.



3. Engage the multi-point lock with the construction handle (if equipped) from the interior. Next, using a standard screwdriver, turn the deadbolt from the interior. See figure 3.



4. When complete, ensure the construction lock is tight as shown in figure 4.

