


## **Installation Instructions**

- 1. Line up bottom mullion fitting with center of door opening and flush with closed doors (Figure 1 or 2) and install.
- 2. Line up top mullion fitting with center of door opening and flush with closed doors as shown in Figure 3 and install. See Figures 5, 6, and 7 (reverse side) for optional frame conditions.
- 3. Cut mullion body to length as shown in Figure 4.
- 4. Insert mullion in top fitting and slide bottom of mullion into place. See Figure 8 (reverse side).
- 5. Nest mullion into bottom fitting and secure set screw.
- Install top mullion clamp over mullion and fitting with mounting screws. See Figure 8 (reverse side).
- 7. Adjust strikes for 1/32 clearance between latch bolt and strike. See Figure 8 (reverse side).

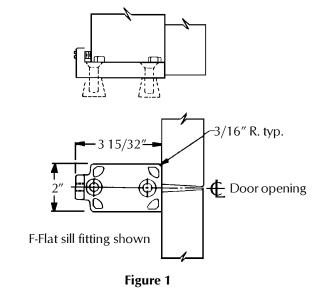

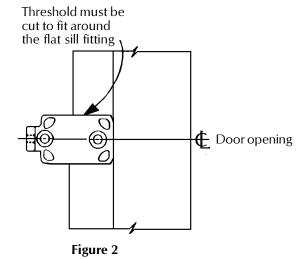

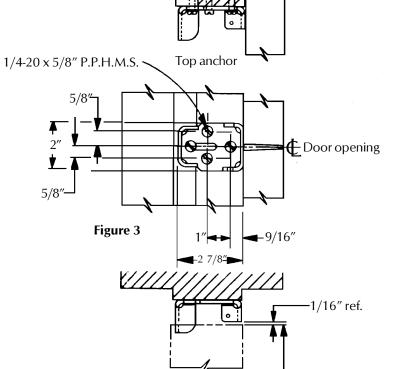

Cut off top end of mullion body so length is 1/16" less than this dimension




Figure 4

**DESCRIPTION:** 

## **4954 REMOVABLE MULLION**

## **INGERSOLL**-RAND

**ARCHITECTURAL HARDWARE** 


**VON DUPRIN** 

For cutouts on inside face of door, see directions in device carton.

DIRECTION NUMBER: 941033\_00(8)

1 of 2

SHEET#: DATE: 05-21-98

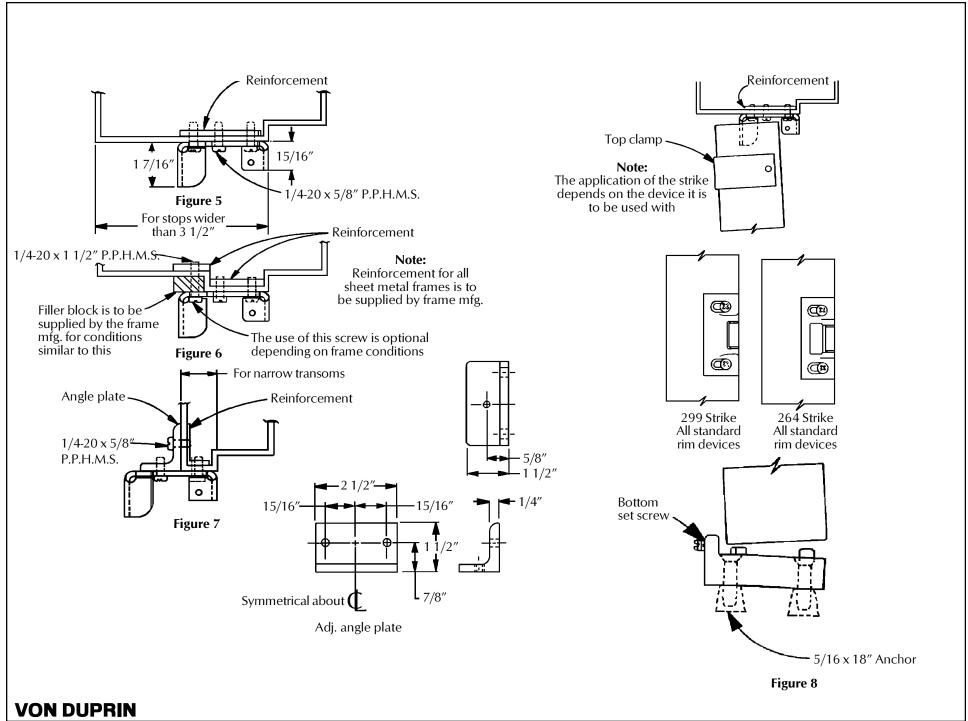

Sheet 2 of 2 941033\_00(8)