

# Elevate and Essential Keyed Alike Handle Sets

## Field Applied Instruction



**ABSTRACT:** This instruction is intended for modifying the lock cylinder tail to the correct length for your door.

**NOTE:** Numbers listed in parentheses () are metric equivalents in millimeters rounded to the nearest whole number.

1. To use the lock cylinder correctly in each respective door, cut the tail to correct length as shown in figure 2. See figure 1 and figure 2.

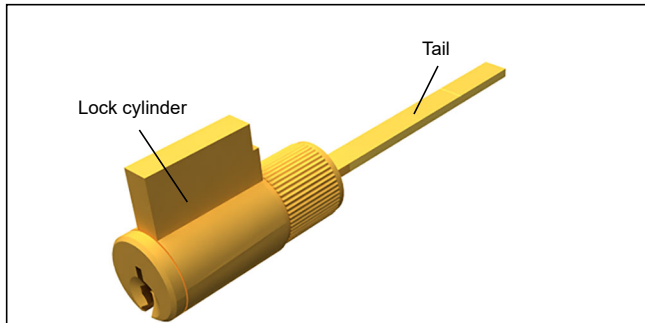


Figure 1

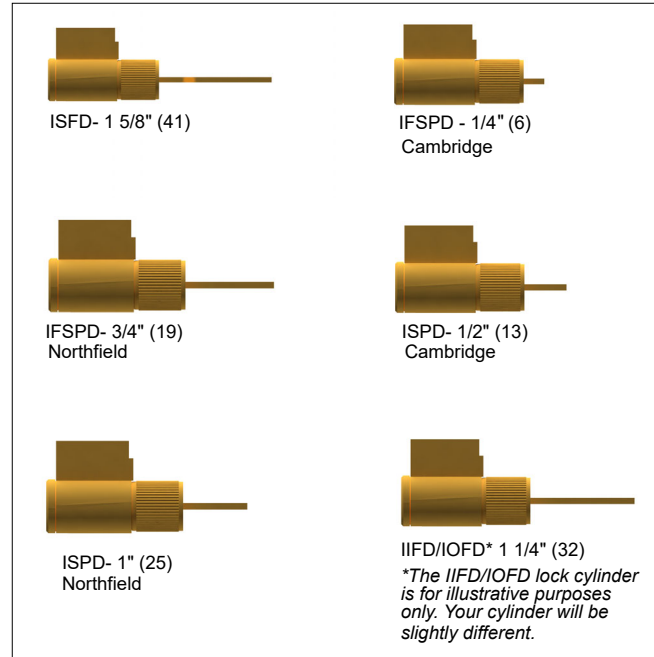


Figure 2