


Retail Display Header Sign Installation Instruction

Retail Wall Installation

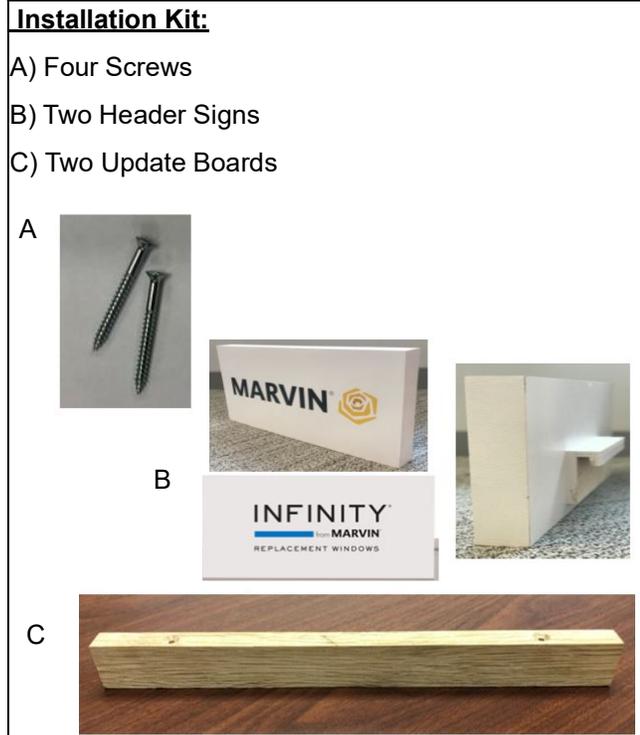

1. Remove current crown molding. Determine where on each side of the top wall you wish to position the sign and mark the spot.
2. Place update board on the edge on marked spot (one on each side of the wall).
3. Flush the side of the update board with the edge of the wall header board.
4. Drill a 1/16" pilot hole 1/2" deep in each hole of the update board. Screw update board in place on wall header board. See [Figure 1](#).



Figure 1

5. Hang brand sign in place over the update board. See [Figure 2](#).



Figure 2

Update Wall Color and Graphic

1. Using Valspar exterior latex satin/ Lunar Eclipse 223A-1®, paint wall (surround trim and legs remain white).
2. Order replacement graphic through OMS.